


# LASER®

## Tyre Step Instructions | Warnings

Assemble as per diagram. Familiarise yourself with all the operating features and how they work. Always keep safety in mind when using the tyre step.

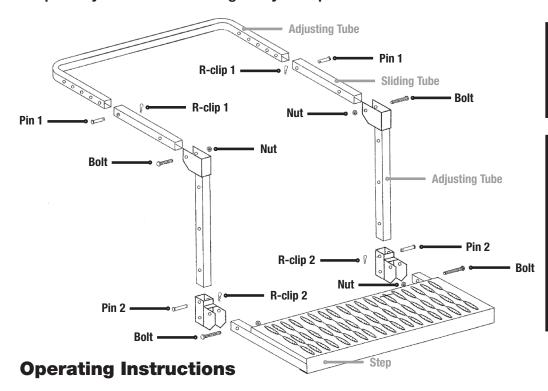

#### **WARNING**

Vehicle wheels must be wedged or brakes must be locked before using the tyre step.

#### **WARNING**

Never use the tyre step without adjustment pins locked into place by use of the R-clips.

Check condition of entire unit before each usage. Check that the adjustment lock pins and R-clips are securely in place.

### Adjustment to fit over tyre

lacktriangle

While step is still folded and placed on the ground, remove pin (**Pin 1**), slide back arm to proper adjustment, reinsert pin in the same direction as removed, lock pin with R-clip (**R-clip 1**).

#### Adjustment vertical in height

While step is still folded and placed on the ground, remove pin (**Pin 2**), adjust step to height desired, re-insert pin in the same direction as removed, lock pin with R-clip (**R-clip 2**).





#### **WARNING**

Always remove tyre step after use DO NOT ATTEMPT TO DRIVE WITH THE TYRE STEP ATTACHED TO VEHICLE.

The Tool Connection Limited cannot be held responsible in anyway whatsoever for damage caused by using this tyre step. The Tool Connection offers a one year warranty on all products and will replace the product free of charge if material is found to be faulty.



